



WERA
Spare Parts Components

 


AIR TANK



AIR TANK ALUMINUM


Seri no Serial no	Hacim (lt.) Capacity (lt)	Ø Çap Ø Diameter	L	L1	L2	X	Çalışma Basıncı (BAR) Working pressure
AAH1 246 020 01	20	246	522	500	261	M22X1,5	12,5
AAH1 246 025 01	25	246	622	600	361	M22X1,5	12,5
AAH1 246 030 01	30	246	722	700	361	M22X1,5	12,5

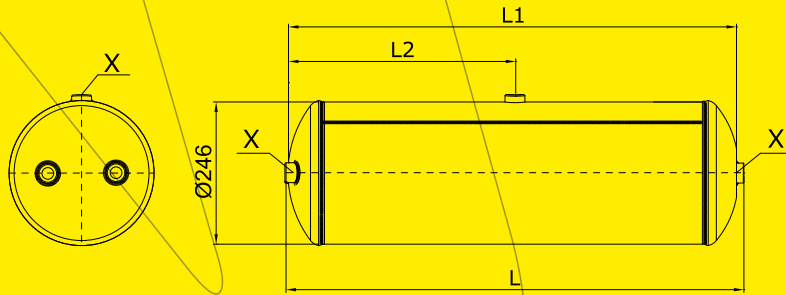



AIR TANK ALUMINUM


Seri no Serial no	Hacim (lt.) Capacity (lt)	Ø Çap Ø Diameter	L	L1	L2	X	Çalışma Basıncı (BAR) Working pressure
AAH2 276 030 01	30	276	552	530	276	M22X1,5	12,5
AAH2 276 040 01	40	276	672	650	336	M22X1,5	12,5
AAH2 276 060 01	60	276	1022	1000	511	M22X1,5	12,5

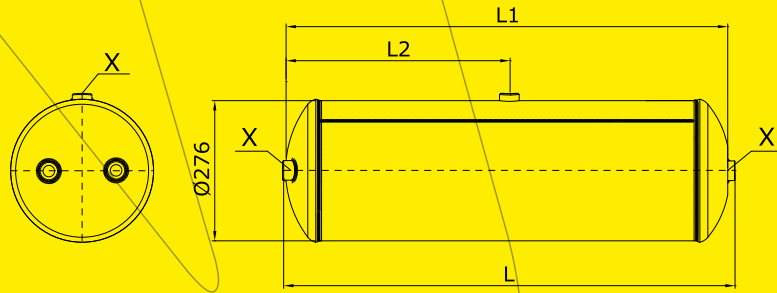 



AIR TANK ALUMINUM

Seri no Serial no	Hacim (lt.) Capacity (lt)	Ø Çap Ø Diameter	L	L1	L2	X	Çalışma Basıncı (BAR) Working pressure
AAH3 305 040 01	40	305	592	570	296	M22X1,5	12,5
AAH3 305 060 01	60	305	882	860	441	M22X1,5	12,5
AAH3 305 080 01	80	305	1162	1140	581	M22X1,5	12,5

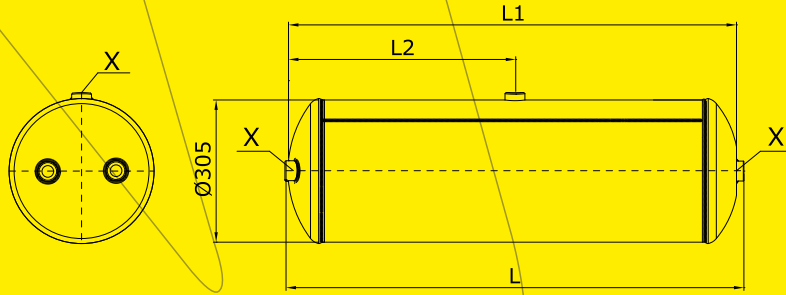 



AIR TANK ALUMINUM

Seri no Serial no	Hacim (lt.) Capacity (lt)	Ø Çap Ø Diameter	L	L1	L2	X	Çalışma Basıncı (BAR) Working pressure
AAH4 396 060 01	60	396	567	545	283,5	M22X1,5	12,5
AAH4 396 080 01	80	396	722	700	361	M22X1,5	12,5
AAH4 396 100 01	100	396	872	850	436	M22X1,5	12,5

